


PLEASE READ AND FOLLOW ALL WARNINGS






FP-730A 3/8" Variable Speed **Heavy Duty Ratchet**

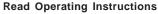

Always become familiar with all the instructions and warnings before operating any power tool.

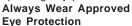

Impact resistant eye protection should meet or exceed the standards as set forth in the United States ANSI Z87.1, Occupational and Educational Eye and Face Protection. Look for the marking Z87.1 on your eye protection to insure that it is an approved style. For further information, ANSI Z87.1. Occupational and Educational Eve and Face Protection, is available from the American National Standards Institute, Inc., 11 West 42nd Street. New York. NY 10036.



Hearing protection should be used when the noise level exposure equals or exceeds an 8 hour timeweighted average sound level of 85 dBA. Process noise, reflective surfaces, other tools being operated nearby, all add to the noise level present in your work area. If you are unable to determine your noise level exposure, we recommend the use of hearing protection.



Avoid Prolonged Exposure to Vibration

Tools can vibrate during use. Prolonged exposure to vibration or very repetitive hand and arm movements, can cause injury. Stop using any tool if discomfort, tingling feeling or pain occurs. You should consult your physician before resuming use of the tool.



This tool is designed to operate at


an air pressure of 90 pounds per square inch gauge pressure (90 PSIG) maximum, at the tool. Use of higher air pressure can, and may cause injury. Also, the use of higher air pressure places the internal components under loads and stresses they were not designed for, causing premature failure. The air supply should be clean and drv. preferably lubricated. For best results, drain the moisture from your compressor daily.

WARNING:

Some dust created by power sanding, sawing, grinding, drilling, and other construction activities contains chemicals known to cause cancer, birth defects or reproductive harm. Some examples of these chemicals are:

- Lead from lead-based paints
- Crystalline silica from bricks, cement and other masonry products
- Arsenic and chromium from chemically treated lumber

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals, work in a well-ventilated area and work with approved safety equipment such as those dust masks that are specially designed to filter out microscopic particles.

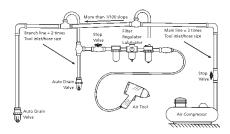

Features

- 65ft. lb. Torque
- Unique Variable Speed Throttle Lever and Valve Allows Precise Speed and Power Control
- Triple Heat Treated Anti Spread Head Design
- Fast Run Down Speed 200 RPM
- · Softouch Coated Grip



Safety Instructions

The following instructions are furnished as general guidelines for use of your pneumatic tool. They cannot comprehensively cover all possible or conceivable uses of the subject tool. For additional information on the safe use of air tools, we advise you to obtain a copy of CAGI B186.1-2009 Safety Code for Portable Air Tools, available from the following source: COMPRESSED AIR AND GAS INSTITUTE 1300 Sumner Avenue Cleveland, OH 44115-2851 Ph: 216-241-7333 www.cagi.org OR from Florida Pneumatic Manufacturing Corp. 851 Jupiter Park Lane Jupiter, FL 33458 561-744-9500 www.florida-pneumatic.com

Tool Application and Usage

The use of the word "shall" in the

B186.1-2009.

following instructions, indicates that

adherence to the particular require-

ment is necessary to conform to CAGI

Portable tools shall be used only for in the safe use of the tool. Tools shall not be used without guards and safety devices as furnished by the manufacturer. Where an air tool is modified or altered, the modifier shall provide the safeguards to enable it to be safely used in the operations intended and to comply with any applicable provisions as contained in CAGI B186.1-2009.

Tool Installation

Pressure regulators shall be used to limit air pressure to the rated pressure where the supply pressure exceeds the tool's rated pressure. Air hoses and lines shall be relieved of compressed air before being disconnected or disjointed, unless there is automatic valve closing protection at the joint being separated. Synthetic lubricants which can cause deterioration of elastomer seals shall not be used in air systems of air tools.


Tool Maintenance

It shall be the tool owner's and/or employer's responsibility to assure that tools are maintained in a safe operating condition. Tool maintenance and repair shall be performed by authorized, trained, competent personnel. Tools shall be disconnected from their compressed air supply before repairs are attempted. Repairs shall be consistent with the manufacturer's recommended procedures. Tool, hoses and fittings shall be replaced if unsuitable for safe operation. It shall be the tool owner's and/or employer's responsibility to keep required rating markings and warnings on the tool in legible condition.

the purposes intended in their design and within the capacity for which they were intended and rated. It shall be the tool owner's and/or employer's responsibility to instruct each operator

Read these instructions carefully before attempting to install, operate or service this Florida Pneumatic product. Failure to comply with the instructions could result in personal injury and/or property damage! Retain these instructions for future reference.



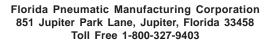



replacement as described above.

	Part No.	Description	Q'ty	Ref. No.	Part No.	Description	Q'ty	24
3	93807-03	THROTTLE VALVE SPRING	1	23	9243-00302	GEAR PLATE	1	40
4	93807-04	THROTTLE VALVE	1	24	9141-00602	BUSHING	1	24-1
5	93807-05	VALVE STEM	1	24-1	93807-24-1	EXHAUST	1	
6	93807-06	THROTTLE VALVE SEAT	1	25	93807-25	CLAMP NUT	1	
/	93807-07	AIR INLET BUSHING	1	26	93807-26	RATCHET HOUSING	1	25
8	93807-08	THROTTLE LEVER	1	27	9149-00106	NEEDLE BEARING	1	35
9	93807-09	SPRING PIN	1	28	9111-00604	CRANK SHAFT	1 4 37	17 ³⁶ 34
10	93807-10	HANDLE	1	29	9211-01202	DRIVE BUSHING	1 3/	
10-1	9149-00304	EXHAUST DEFLECTOR SEAL	2	30	93807-30	RATCHET YOKE	1	
11	9225-00501	BEARING CAP	1	31	9112-01303	WASHER	1	33 7 9
12	9149-00105	BALL BEARING	1	32	9411-0110301	REVERSE BUTTON	1	32
13	93807-13	REAR END PLATE	1	33	9111-00407	PAWL PIVOT	1	31 27 13
14	93807-14	ROTOR	1	34	9510-003041	RATCHET ANVIL	1	
15	93807-15	ROTOR BLADE	4	35	9113-00314	SPRING	1	28.
16	93807-16	CYLINDER	1	36	9211-00302	SPRING CAP	1	15x4
17	93807-17	FRONT END PLATE	1	37	9342-00101	RATCHET PAWL	1	
18	9149-00101	BALL BEARING	1	38	93807-38	FRICTION SPRING	2	29 16
19	9212-01304	WASHER	1	39	93807-39	STEEL POST	2	30
20	9442-00202	INTERNAL GEAR	1	40	9311-01004	THRUST WASHER	1	17
21	9141-00202	PLANET GEAR	3	41	9113-00602	RETAINING RING	1	18 08
22	9111-00406	GEAR PIVOT	3					19 05 9
								20 04
								22
_im	ited War	ranty						23
		warrants its tools to be free						
nan F	Torida Pneum	arranty does not apply to to matic or its authorized service	ce cente	rs. If a Fl	orida Pneumati	c proves defective in	materia	al of workmanship
		ter purchase, return it to ar						
nclos	e your name	, address and adequate pr	oot ot p	urchase d	iate with a brief	description of the de	efect. F arranted	Florida Pneumatic

Description	Model No.	Free Speed RPM	Bolt Capacity (in.)		Max. Torque ft. lb. @ 90psi	Weight (lbs.)	Length (in.)	Air Inlet (NPT)	Rec. Hose Size	Rec. Air Pres.	Air Cons. (cfm)
3/8" Heavy Duty Ratchet	FP-730A	200	1/2	3/8	65	2-1/2	10-1/2	1/4	3/8 I.D.	90 psi	4

limited to repair or replacement of the defective tool. There are no other warranties expressed or implied and Florida Pneumatic shall not be liable for incidental, consequential or special damages, or any other damages, costs or expense of repair or